




Driver Settings

MCP50 Driver Training


Driver Settings

- Some of the settings on the DIU50 are controlled by your company and cannot be changed.
- You need to know how to set:
 - Volume
 - Brightness
 - Time zone
- You also need to be able to calibrate the touchscreen.

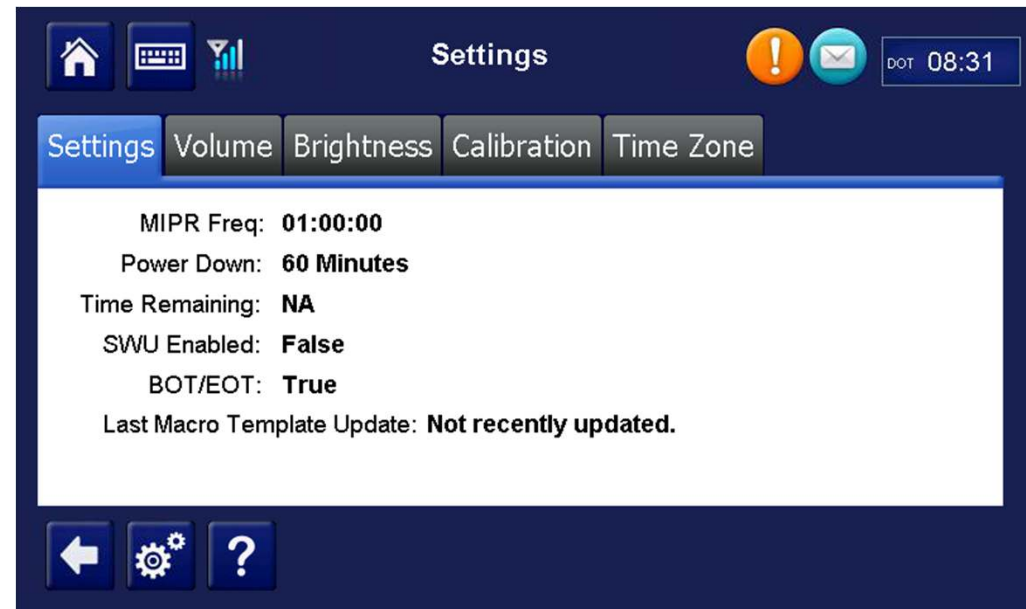


Driver Settings: View MCP50 Information

1. From the 2nd home menu screen, tap Settings.

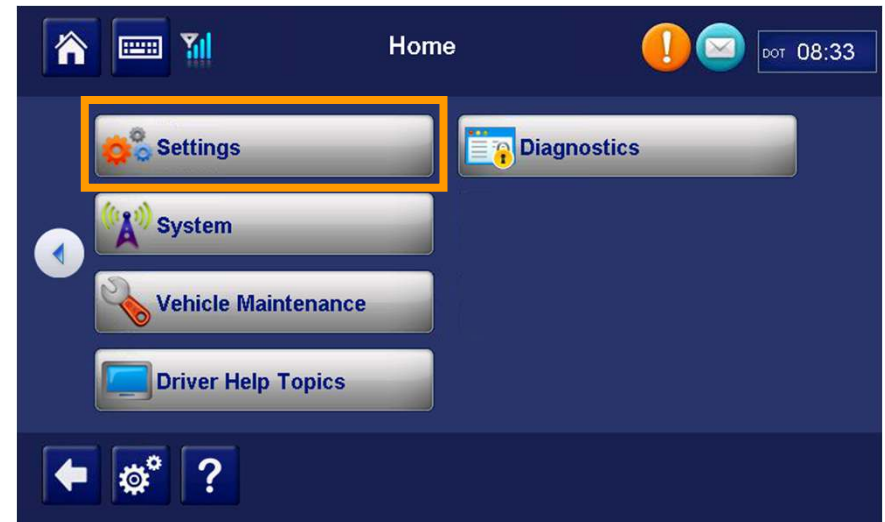


2. View information about the MCP50.

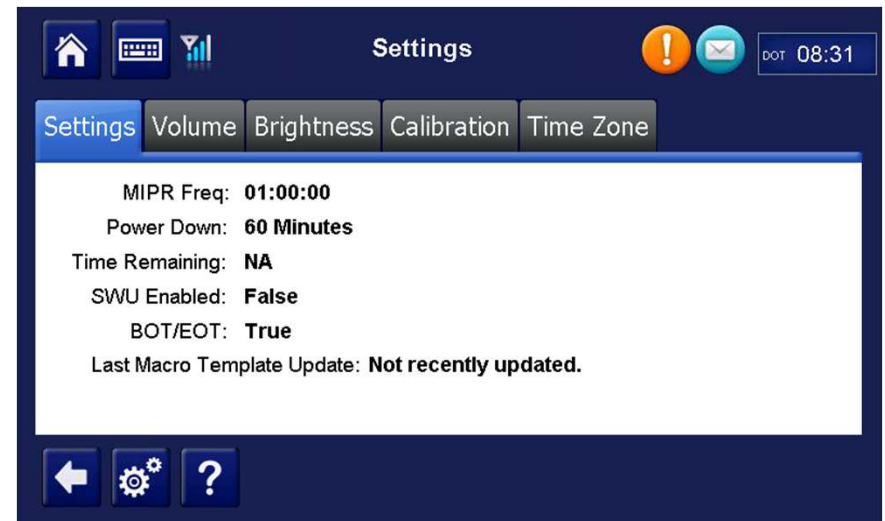

Driver Settings: Set Volume

1. Tap the Volume tab.
2. Tap the plus or minus button to move to the desired volume level.
3. Tap Test to hear the volume level.


When you navigate away from this tab your volume level is saved.

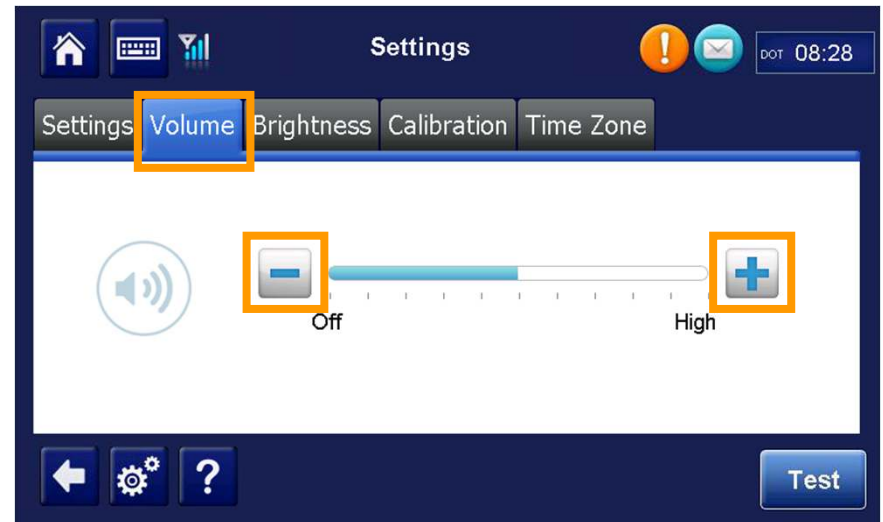

Driver Settings: Set Brightness


1. Tap the Brightness tab.
2. Tap the plus or minus button to move to the desired brightness level.

When you navigate away from this tab your brightness level is saved.

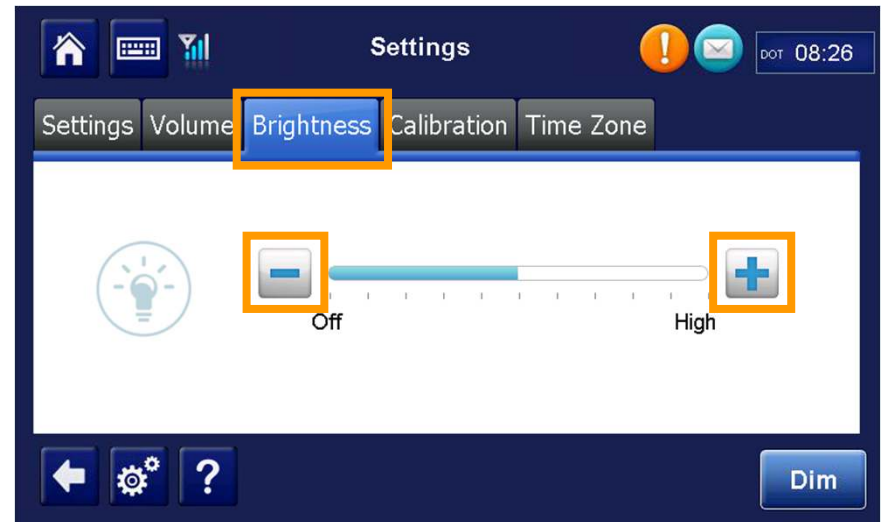

Driver Settings: Set Time Zone



1. Tap the Time Zone tab.
2. Use the scroll bar to locate the time zone you want and tap it to select it.
3. Tap Apply.

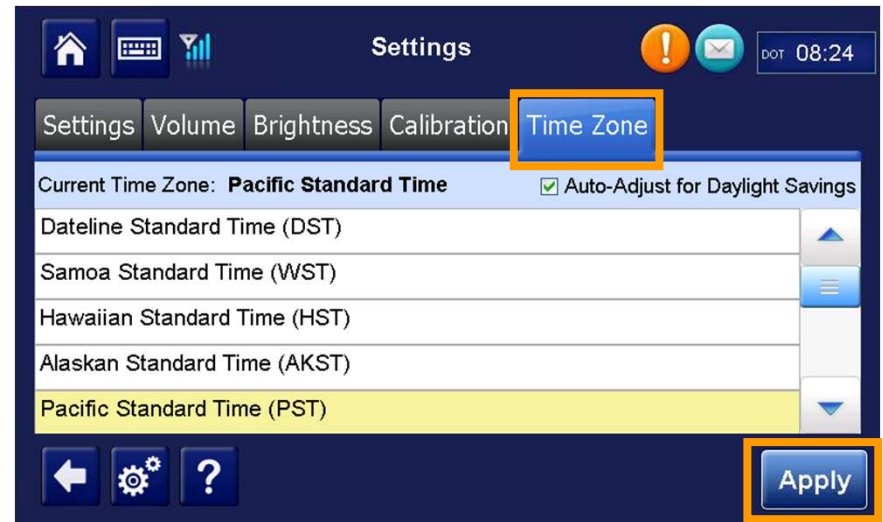

Driver Settings: Calibrate Display


1. Tap the Calibration tab.
2. Tap Calibrate.
3. Following directions, tap and hold on the screen at the center of each target shown.

NOTE: You can use the tip of a pen as long as the ballpoint is retracted.

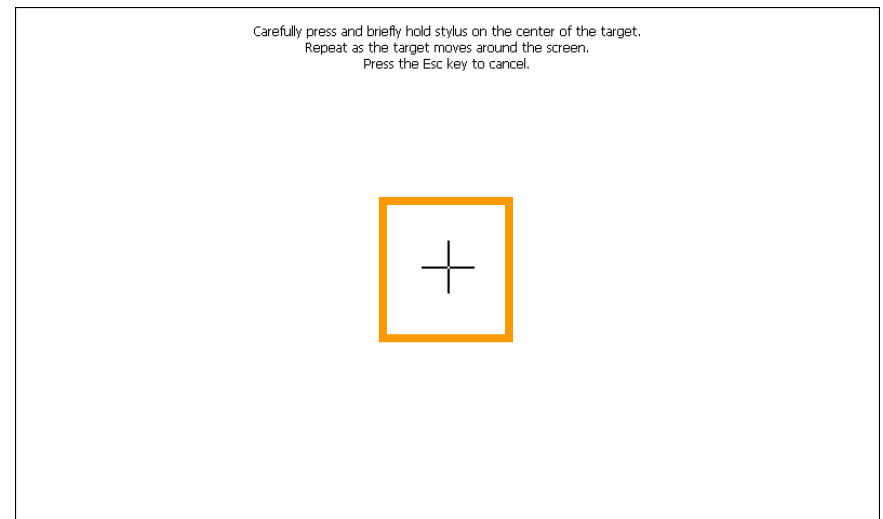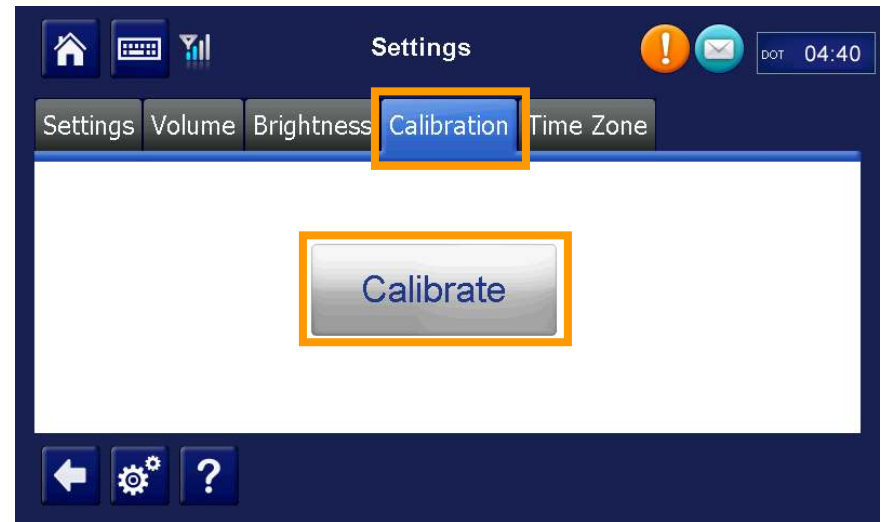

Driver Settings: Calibrate Display

4. Tap OK to dismiss the success notification.

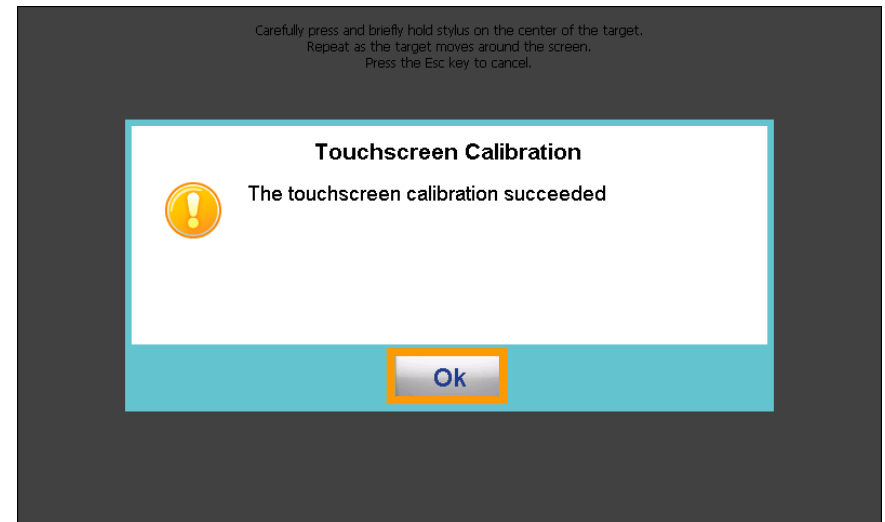

NOTE: You do not need to calibrate the display unless you are asked to by a technician.