


# Vehicle Maintenance

## MCP50 Driver Training


# Vehicle Maintenance

- Monitors engine faults from your vehicle and sends information back to your company automatically.
- You need to know how to:
  - Check current faults
  - See monitored conditions on your vehicle

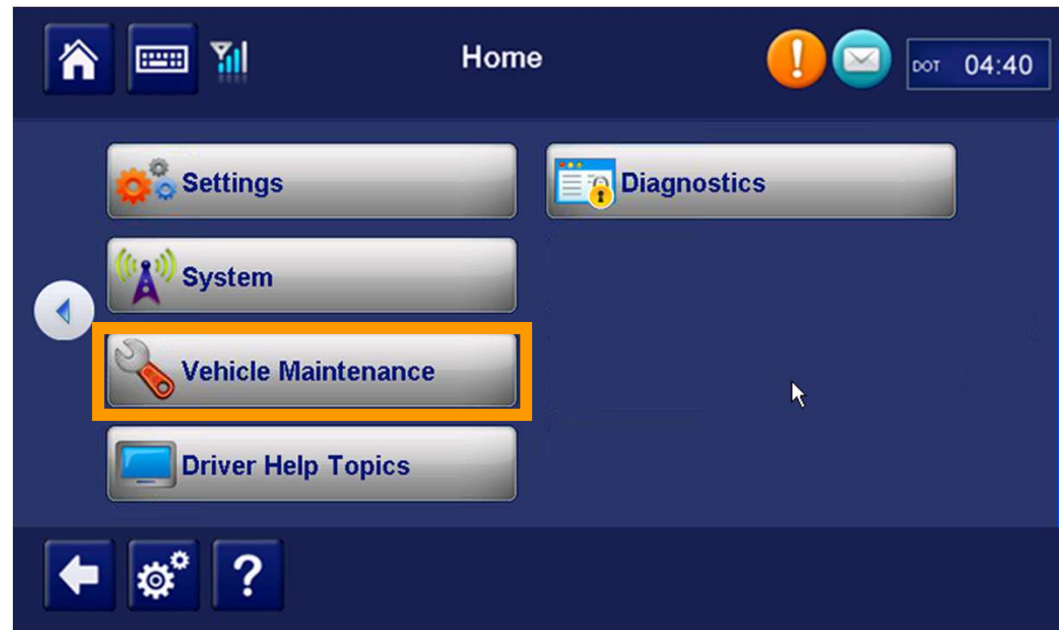

# Check Vehicle Maintenance

1. Tap Vehicle Maintenance.

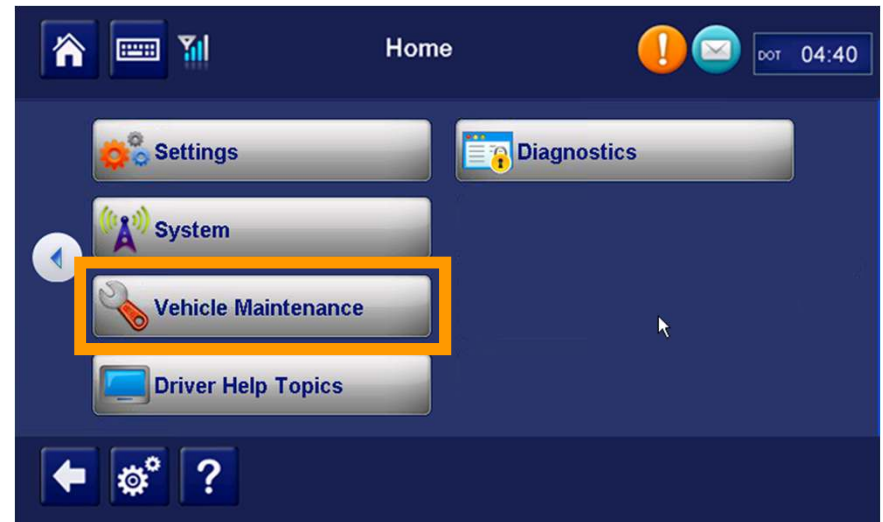

2. Review the current conditions for your vehicle.

3. The Monitor List tab shows all conditions that are being monitored.

